

Pattern variations

The available patterns vary depending on the product. Check the page of each product.



KRM-257

Fan finish

Make fan-shaped patterns with a trowel.



KRM-002

Spanish finish

Make patterns by moving a trowel vertically, horizontally and diagonally with a pressing force applied to the rear end of the trowel (the tip of the trowel does not contact the surface).



KRM-049

Linen weave finish with trowel

Before water on the surface is completely absorbed, apply a stainless steel trowel with a thickness of 0.2 mm to make wave patterns.



KRM-154

Spray finish

The standard procedure is to use a lysine gun to spray twice. Spray a sufficient amount throughout the area to make sure the base will not show through.



KRM-406

Feather finish

Make patterns using the tip of a trowel (the rear end of the trowel does not contact the surface).



KRM-024

Linen weave finish (coarse)

Use a dedicated pattern cartridge (sold separately) to add patterns of approx. 30 to 40 cm in length by moving the cartridge two to three times in the same direction.
 ● Pattern cartridges of fine and coarse types are available.



KRM-034

Fan finish with trowel brush

Add fan-shaped patterns with a brush.



KRM-253

Spanish finish with trowel brush

Make patterns by moving a trowel brush vertically, horizontally and diagonally.



KRM-002

Crackle faux finish with trowel brush

Before the coated surface gets dry, put material over partial areas and then apply a brush as if to flatten the raised surface.



KRM-402

Crackle faux finish

Put coating material over partial areas on top of the coated surface and then apply a brush on the surface to finish.



KRM-088

Brush finish

Apply a brush, such as a plasterer's brush, before water on the surface is completely absorbed. You can make desired patterns such as straight lines, curves and points.




KRM-157

Non-pattern finish (containing coarse straw fibers)

Mix one bag of this product with one bag of straw fibers (sold separately), and knead well.

- Some wave marks may remain.
- Straw fibers of "extra coarse", "coarse" and "fine" types are available.

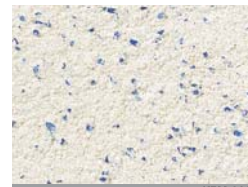

KRM-002

Glass-bead finish

Prepare the coating material by mixing it with "pieces of colored glass," and apply the mixture using a trowel. Move the trowel with only a slight amount of force so as not to scratch the colored glass with it. Dip a trowel brush in water and squeeze it tightly to drain the excess water. Apply the brush over the pieces of colored glass by gently stroking in all directions until the glass surface is exposed.

- When exposing the glass surface with a trowel brush, move the brush gently without using too much force. If the brush is pressed too forcefully, the coating material will be removed and the base will be exposed.
- Not enough colored glass is revealed after the coating material dries, again prepare a trowel brush that has been dipped in water and squeezed tightly to drain the excess, and then apply gentle brush strokes over the coating material to expose more pieces of glass.